


QUICK START GUIDE

1 Start with Full Assembled Cart



2 Attach Clips/Tool Holders to Cart

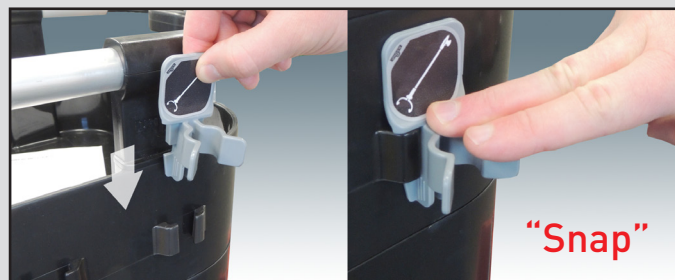

Attach all Tool Clips. Be sure they "Snap" into place.



Attach all Tool Holders. Be sure they "Snap" into place.

3 Attach Tools to Clips/Tool Holders



Attach tools to designated clips. Be sure the tools "Snap" into place.



Attach tools to designated holders.


4 Place Restroom Bucket onto Cart









Bucket securely fastens to cart so it will not spill as you maneuver obstacles.

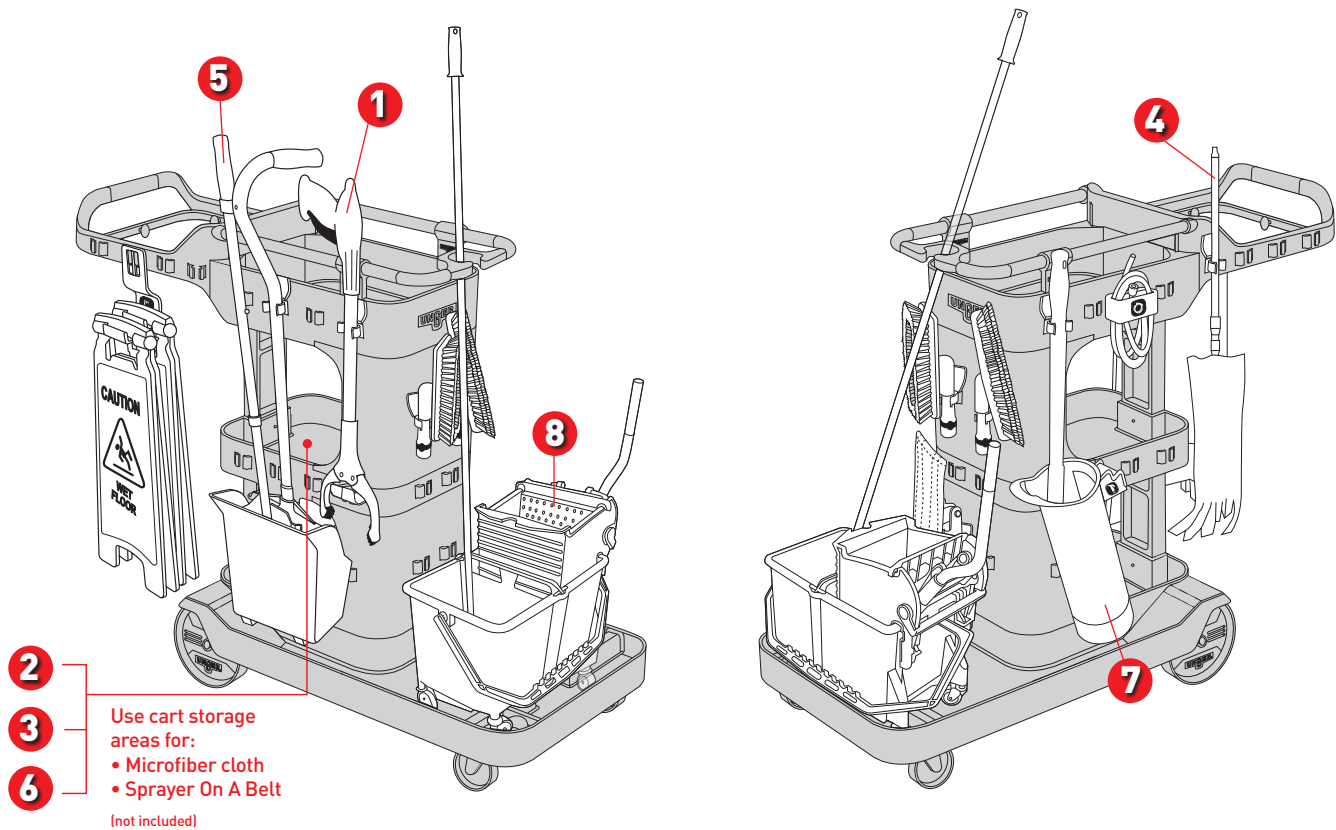UNGER'S 8-STEP DAILY CLEANING PROCESS

All the tools on the Unger Better_x Floor System Cart can be used with the 8-Step Daily Cleaning Process.

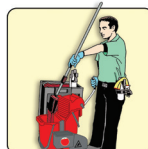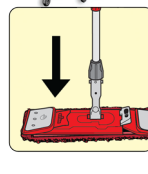

<p>1</p> <p>Remove Debris</p>  <p>Products Used: Nifty Nabber® Action: Clean debris from urinals and toilets. Check and flush urinals and toilets.</p>	<p>2</p> <p>Dispense Cleaning Solution</p>  <p>Products Used: Dispenser Action: Spray germicide or bowl cleaner inside urinals and toilets.</p>	<p>3</p> <p>Replenish Supplies</p>  <p>Action: Replace toilet seat covers, paper towels, soap dispensers and empty the trash cans.</p>	<p>4</p> <p>Dusting & Spot Cleaning</p>  <p>Products Used: Pro Duster Action: Use Pro Duster to spot clean dividers and other high-access surfaces.</p>	<p>5</p> <p>Sweep Floor</p>  <p>Products Used: Ergo Dust Pan Action: Sweep floor removing all dust and debris before mopping.</p>	<p>6</p> <p>Clean Surfaces</p>  <p>Products Used: Microfiber cloth, Sprayer On A Belt Action: Spray cleaning solution onto the microfiber cloth and wipe down all surfaces.</p>
<p>7</p> <p>Clean Urinals/Toilets</p>  <p>Products Used: Ergo Toilet Bowl Brush, Microfiber Cloth, Sprayer On A Belt Action: Clean inside urinals and toilets with brush. Spray and wipe down surfaces with solution and microfiber cloth.</p>	<p>8</p> <p>Mop Floor</p>  <p>Step 1 Collapse mop by stepping on foot pedal.</p>  <p>Step 2 Dip in back section of bucket then wring out.</p>		<p>Step 3 Dip in front section of bucket containing cleaning solution. Return to back section and wring out.</p>  <p>Step 4 Drop the mop to the floor and continue to mop in an "S Pattern".</p> 	<p>Step 5 Dip in back section of bucket then wring out. Dip in front section of bucket containing cleaning solution. Return to back section and wring out. Continue mopping in "S Pattern".</p> 	



Quality Tools for Smart Cleaning™

Unger Enterprises Inc.

425 Asylum Street • Bridgeport, CT 06610

Tel.: 800 431 2324 • Fax: 800 367 1988

unger@ungerglobal.com